


# MANUAL RX MULTI WIFI ADMIN

## 1. RX Multi Wifi

## 2. CONEXIONES

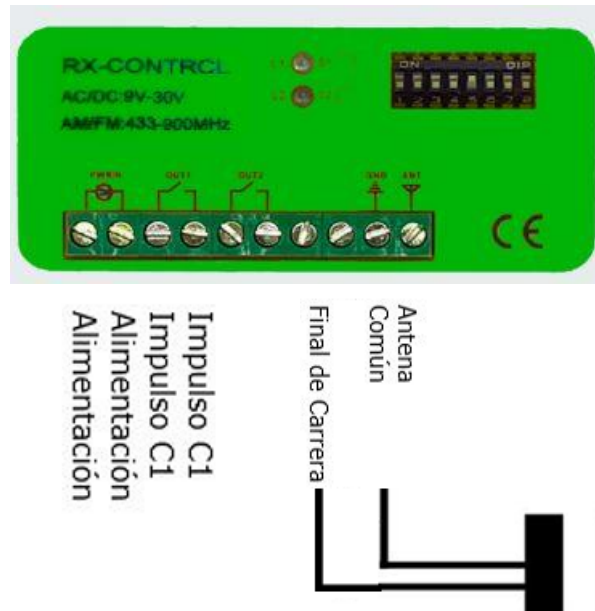

## 3. Botón de grabación y LED

En el receptor RX Multi WiFi, hay dos canales independientes. Cada canal tiene un botón de grabación S1 y S2 con su respectivo LED L1 y L2.

- El canal 1 vincula el dispositivo con el móvil, opción wifi.
- El canal 2 esta deshabilitado

## 3.-AÑADIR UN DISPOSITIVO

**NOTA: LA RED WIFI DEBE SER 2.4G, EN EL CASO DE QUE TENGA RED WIFI 2.4 Y 5G ASEGURESE QUE LAS CONTRASEÑAS SON DIFERENTES, DE NO SER ASI SE CREARA UN CONFLICTO DE SINCRONIZACIÓN DEL DISPOSITIVO**


1- Descargue la APP "DASPI" desde:




## 2- Crear nueva cuenta




## 3- Añadir dispositivo

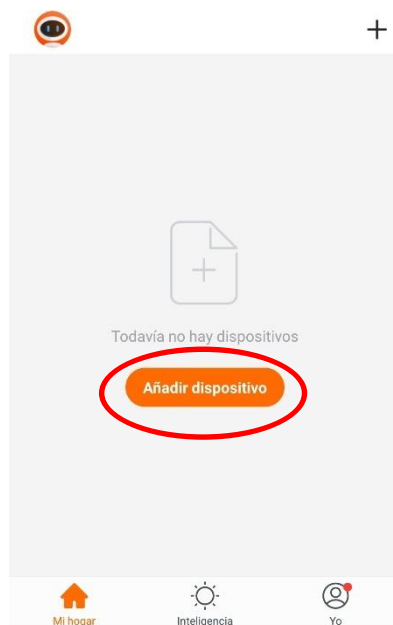

## 4- Seleccionar tipo de dispositivo a añadir, en este caso "receptor"

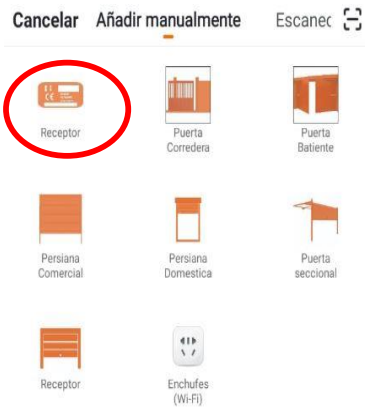


5-Primero comprobar que el dispositivo esta conectado a la corriente eléctrica, a continuación, pulsar **“la luz de confirmación en el flash”**

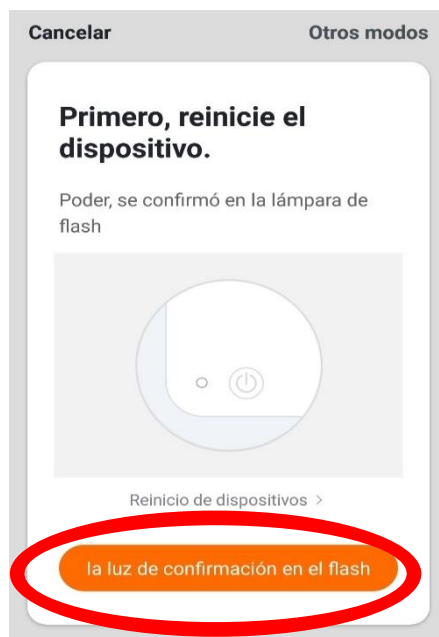

6- Conectar el móvil al wifi con el que vaya a trabajar el receptor.

7- Introducir en la APP la red wifi y la contraseña para confirmarle al receptor dónde queremos que se conecte. Pulsar confirmar.

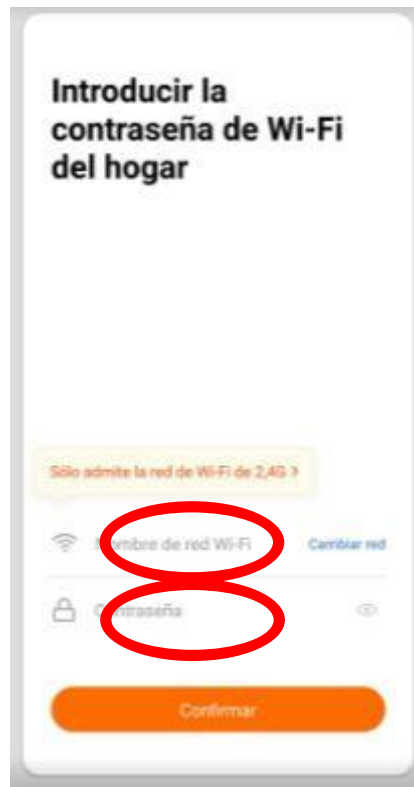

8- Mantener pulsado en el motor el botón "S1" durante unos segundos hasta que el led rojo parpadee





9- El receptor se agregó correctamente. Pulse **“Finalizado”**




#### 4. Memorizar un botón o un mando:

Solo funciona con mandos Daspi 868 Mhz.

1. Elegir la posición para grabar el mando.



2. desbloquear la posición.

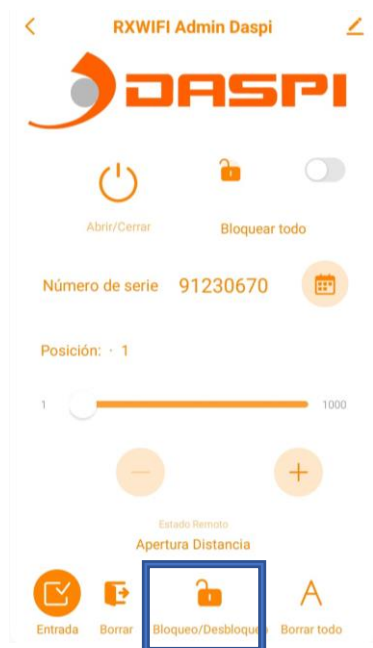


### 3. Abrir programación en el receptor



4. Pulsar el mando, soltar y volver a pulsar (el led parpadeará)

## 5.-ELIMINAR UN MANDO GRABADO EN EL RECEPTOR

1. Selecciona la posición del mando a eliminar

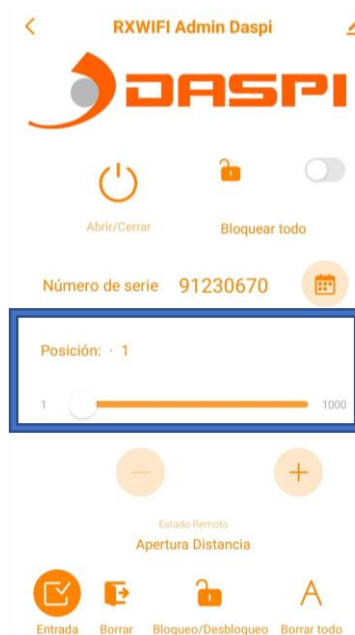

2. Pulsar la tecla "Borrar". Pulsa de nuevo para confirmar.



## 6.-BLOQUEAR/DESBLOQUEAR UN MANDO YA GRABADO


1. Elegir la posición del mando a bloquear o desbloquear y pulsar el candado situado abajo.
- 2.





## 7.-BORAR TODOS LOS MANDOS DE LA MEMORIA

Pulsar el icono situado abajo a la derecha.

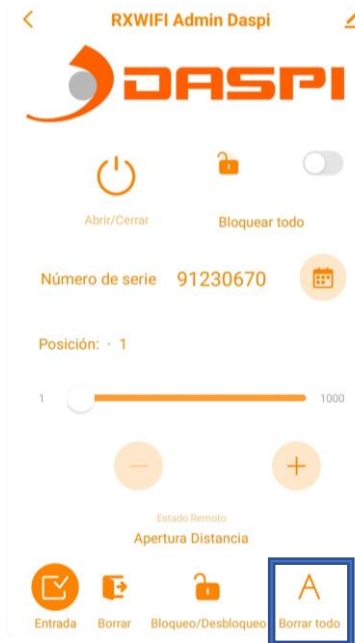


## MANUAL RX MULTI WIFI ADMIN

- 1-RX Multi Wifi
- 2-CONNECTIONS



Alimentación  
Impulso C1  
Impulso C1

Antena  
Común  
Final de Carrera

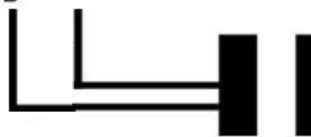

## 3.RECORD BUTTON AND LED

In the RX Multi WiFi receiver, there are two independent channels. Each

channel has an S1 and S2 record button with its respective L1 and L2 LEDs.


- Channel 1 links the device with the mobile, Wi-Fi option.
- Channel 2 is disabled

#### 4.-Learning a device


1- Download the “DASPI” App on:



2- Create an account

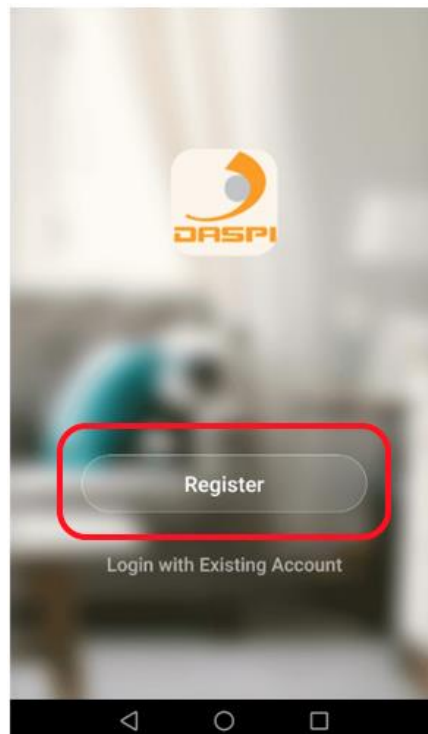


3- Press on “Add Device”

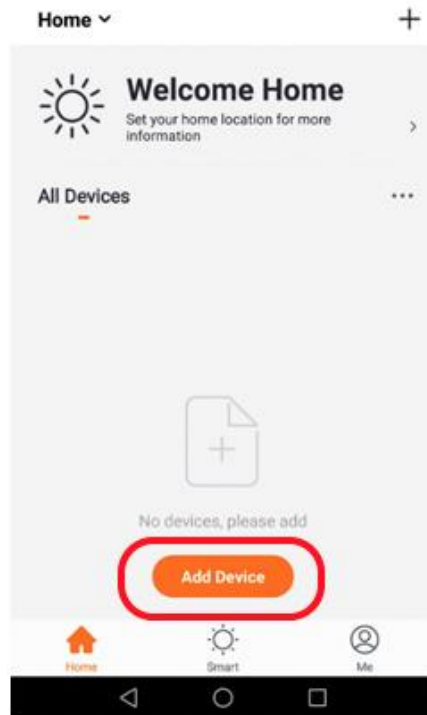

4- Choose the kind of device to be added. In this case: **“receiver”**




5- Check the device is connected to the power and then press on **“Confirm indicator rapidly blink”**

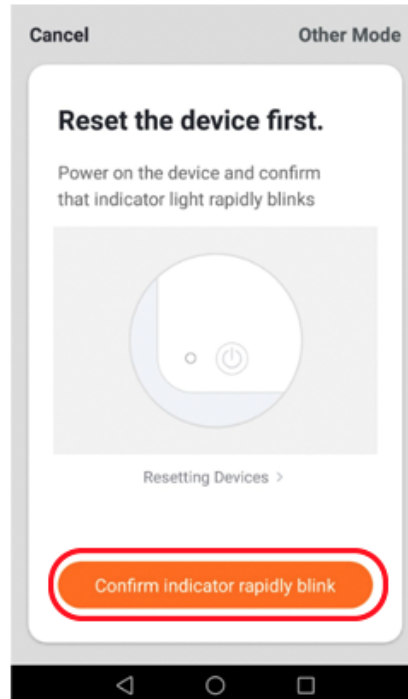


6- Connect your phone to the WiFi network the receiver will work with.


7- Choose the WiFi network on the App and introduce the password to let the receiver what network should use. Press **“Confirm”**.

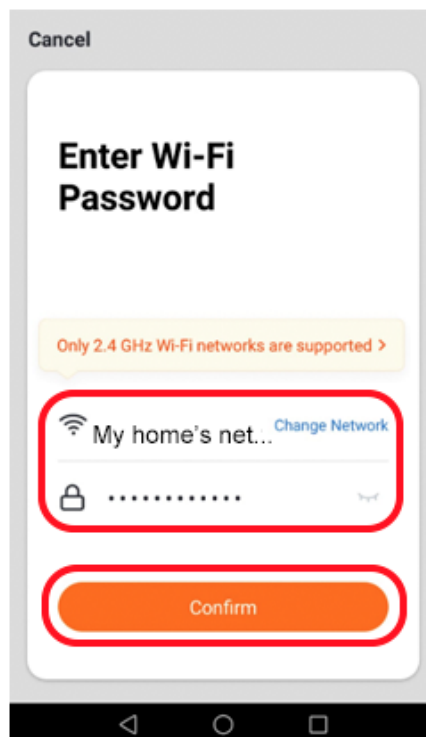

8- Keep pressed the button “S1” on the receiver for few seconds until the red LED starts flashing.

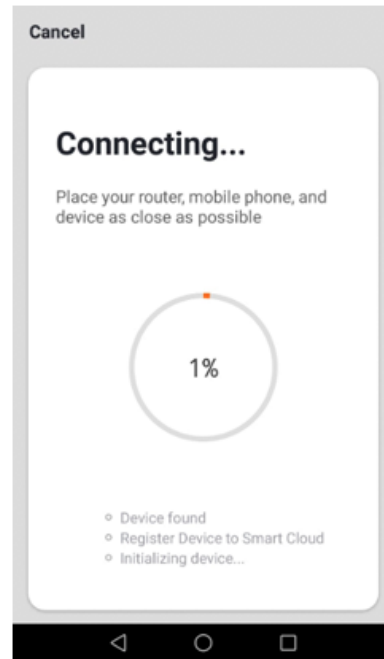

9- The receiver has been correctly added. Press “Done”

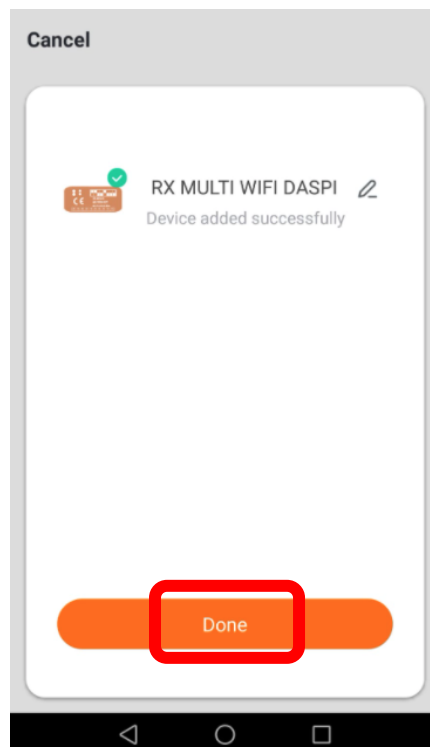


10- Once the receiver has been added, we can control de device with the smartphone.

**5.-Program a button or a remote control:**  
Only work with Daspi remote 868 Mhz.

1.-Choose the position to record the command.



2-unlock position.

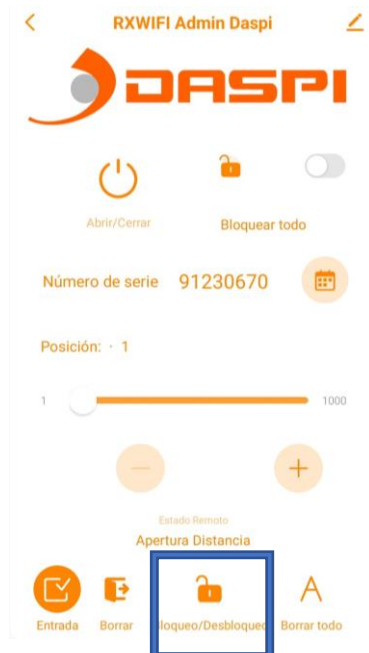

### 3-Open programming on the receiver



6. Press the knob, release and press again (the led will blink)

### 7.-DELETE A REMOTE RECORDED ON THE RECEIVER

1. Select the position of the remote to delete



2. Press the "erase" key. Press again to confirm.



### 8.-LOCK / UNLOCK AN ALREADY RECORDED REMOTE

1. Choose the position of the control to lock or unlock and press the padlock located below.





## 9.-DELETE ALL COMMANDS FROM THE MEMORY

Press the icon located at the bottom right.

